

FM2M ToolBox 0.76

Features comparison



FM2M Website

<http://www.fm2m.com>


FM2M Facebook group

<https://www.facebook.com/groups/FlyMe2TheMoon/>

MODULE	FEATURE	Lite	PRO	Remarks
General features	Persistent configuration (SD-CARD)	v	v	On OpenTX only preview widget
	Running in background mode	v	v	
Dashboard	RC Link (RQLY or RSSI)	v	v	COLOR LCD radios only COLOR LCD radios only
	RSNR		v	
	RSSI (if RQLY as main)		v	
	RC Link speed		v	
	Model battery total voltage	v	v	
	Model battery average cells voltage	v	v	
	Model battery cells count	v	v	
	Radio battery voltage	v	v	
	Radio battery remaining %		v	
	Radio battery cells count		v	
	Model name	v	v	
	Model picture	v	v	
	Model Arm status (using Switch)	v	v	
	Model Arm status (Telemetry)		v	
	Model Gyro/FC Status (using Switch)	v	v	
	Model Gyro/FC Status (Telemetry)		v	
	VTX channel name		v	
	VTX frequency		v	
	VTX power level		v	
	VTX pitmode		v	
	Throttle limiter indicator		v	
	Basic Telemetry sensors panel	v	v	
	All Telemetry sensors view (raw values)		v	
Timer reset		v		
Temporary alerts muting		v		
Configuration	Radio - Radio Mode	v	v	B&W LCD radios only COLOR LCD radios only
	Radio - Start module		v	
	Radio - LCD backlight		v	
	Telemetry - Protocol selection	v	v	

FM2M ToolBox 0.76

Features comparison

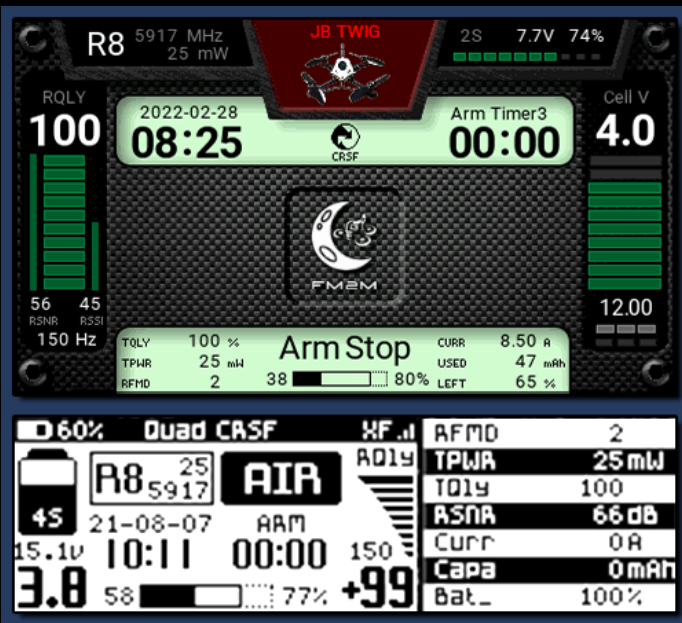

FM2M Website
<http://www.fm2m.com>

FM2M Facebook group
<https://www.facebook.com/groups/FlyMe2TheMoon/>

MODULE	FEATURE	Lite	PRO	Remarks	
	Telemetry - RSSI warnings levels		v		
	Telemetry - RQLY warnings levels		v		
	Telemetry - RSNR warnings levels		v		
	Model battery - Cell minimum level		v		
	Model battery - Cell maximum level		v		
	Model battery - Cell no power level		v		
	Model battery - Low level warning		v		
	Model battery - Critical level warning		v		
	Model battery - haptic warning		v		
	Throttle - channel input		v		
	Throttle - limiter input		v		
	Indicators - Arm Status via Switch	v	v		
	Indicators - Arm Status via Telemetry		v		CRSF & ELRS only
	Indicators - Gyro/FC Status via Switch	v	v		
	Indicators - Gyro/FC Status via Telemetry		v		CRSF & D16 only
Timer Mode		v			
Timer Used selection		v			
VTX Info	Channels Chart (channels by frequency)	v	v		
	Channels Table (channels by name)	v	v		
	Next channel selection & info	v	v		
	VTX Region		v		COLOR LCD radios only
	Channel view type		v		COLOR LCD radios only
	Channel symbol reading		v		GHOST and CRSF only
	Frequency reading		v		GHOST and CRSF only
	Power level reading		v		GHOST and CRSF only
	PitMode status reading		v		GHOST and CRSF only
Sticks Commands	Commands overview		v		
	Radio mode selection (1,2,3,4)		v		
Betaflight Arm Errors	Error overview		v		
	Error beep emulation		v		